
How to wire the MicroHam MK2R into the KK1L 2x6 Switch/Band Decoder

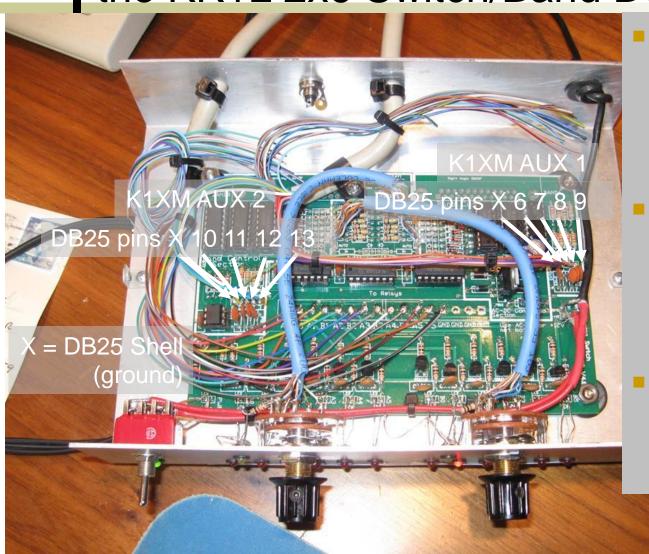

- Cut off the end of a DB25 cable
 - I used an old Centronix printer cable
- Use an ohm meter to trace the wires to the correct position on the DB25
- NOTE: MicroHam radio port needs to be configured to output radio band